


**CONTENTS**

<b>REPLACEMENT PARTS – FRONT BODY</b>	<b>1</b>
<b>REPLACEMENT PARTS – SIDE BODY</b>	<b>2</b>
<b>REPLACEMENT PARTS – REAR BODY</b>	<b>3</b>
<b>REPLACEMENT PARTS – DOOR</b>	<b>4</b>




REPLACEMENT PARTS – FRONT BODY

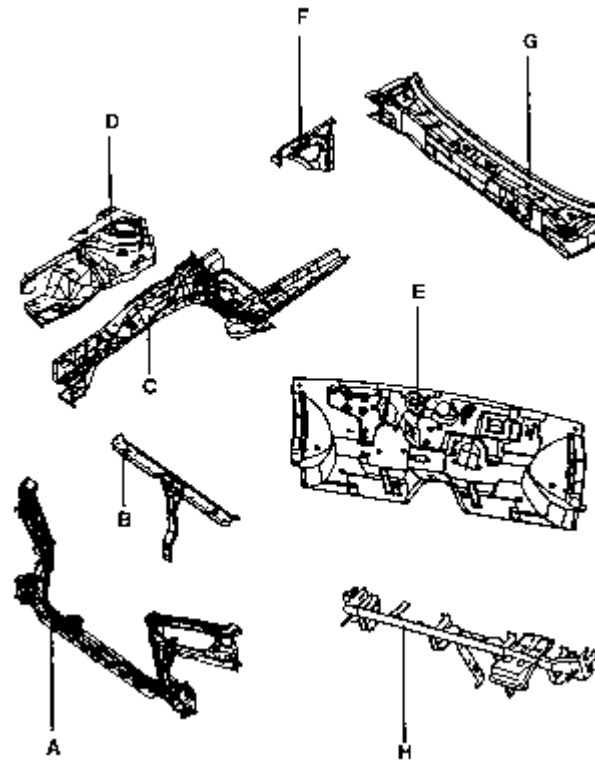

	PART NAME	
A	Radiator Support Panel Complete	
B	Radiator Support Center Member	
C	Front Side Member Assembly	LH/RH
D	Fender Apron Panel Assembly	LH/RH
E	Dash Panel Complete	
F	Cowl Side Outer Panel	LH/RH
G	Cowl Panel Assembly	
H	Cowl Cross Member Assembly	




## REPLACEMENT PARTS – SIDE BODY

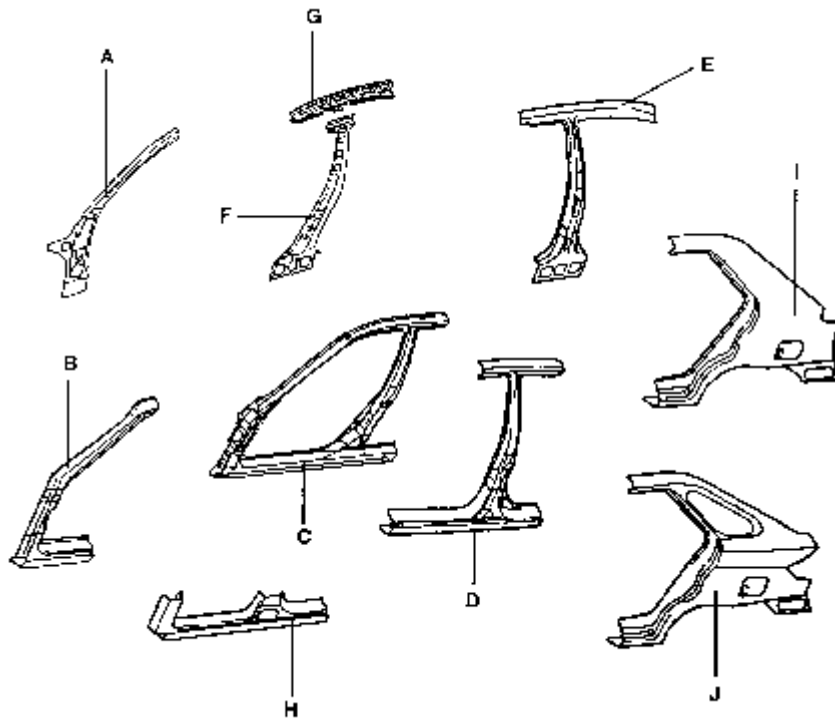

	PART NAME	
<b>A</b>	Front Inner Pillar Assembly	LH/RH
<b>B</b>	Pillar Outer Panel	LH/RH
<b>C</b>	Side Outer Reinforcement	LH/RH
<b>D</b>	Center Outer Pillar Assembly	LH/RH
<b>E</b>	Center Inner Pillar Assembly	LH/RH
<b>F</b>	Center Pillar Inner Panel	LH/RH
<b>G</b>	Roof Side Inner Rail	LH/RH
<b>H</b>	Side Sill Outer Panel	LH/RH
<b>I</b>	Quarter Outer Panel	LH/RH
<b>J</b>	Quarter Outer Panel, 5 Door	LH/RH




REPLACEMENT PARTS – REAR BODY

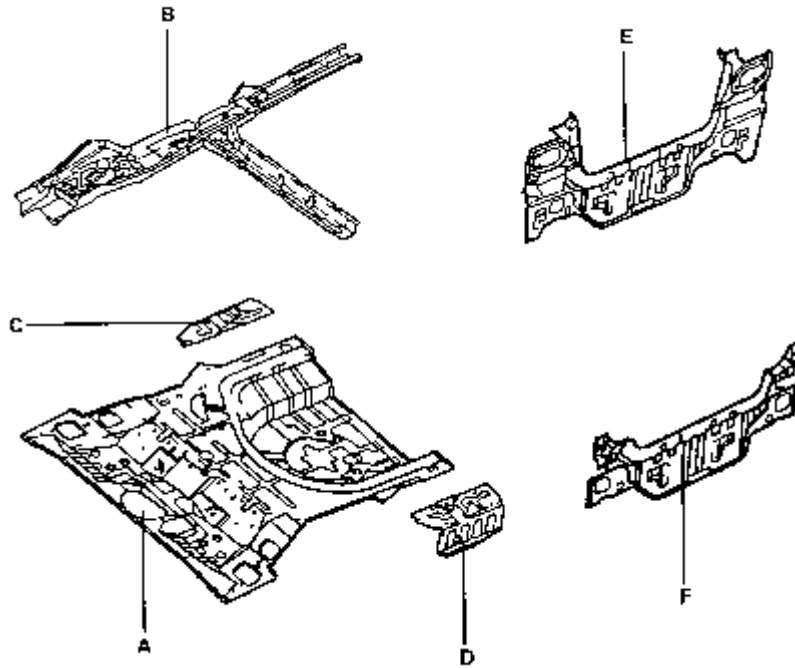

	PART NAME	
<b>A</b>	Rear Floor Panel	
<b>B</b>	Rear Floor Side Member Assembly	LH/RH
<b>C</b>	Rear Floor Side Panel Assembly	RH
<b>D</b>	Rear Floor Side Panel Assembly	LH
<b>E</b>	Back Panel Assembly (5 Door)	
<b>F</b>	Back Panel Assembly (4 Door)	



REPLACEMENT PARTS – DOOR

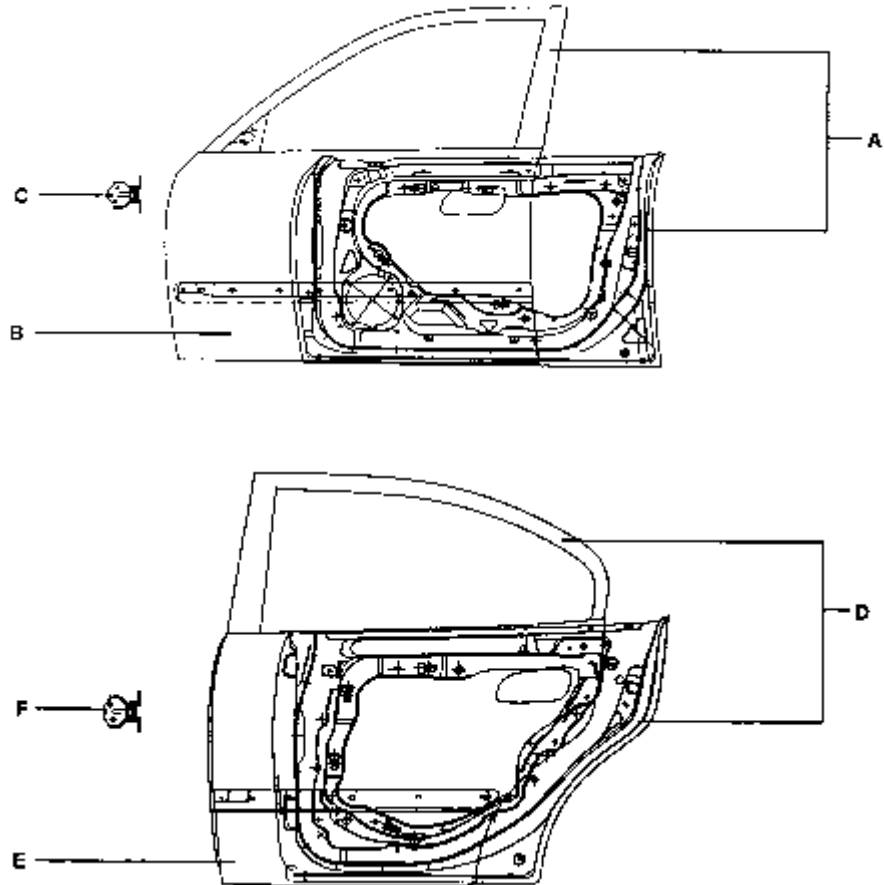

	PART NAME	
<b>A</b>	Front Door Panel Assembly	LH/RH
<b>B</b>	Front Door Outer Panel	LH/RH
<b>C</b>	Front Door Hinge Assembly	LH/RH
<b>D</b>	Rear Door Panel Assembly	LH/RH
<b>E</b>	Rear Door Outer Panel	LH/RH
<b>F</b>	Rear Door Hinge Assembly	LH/RH

